
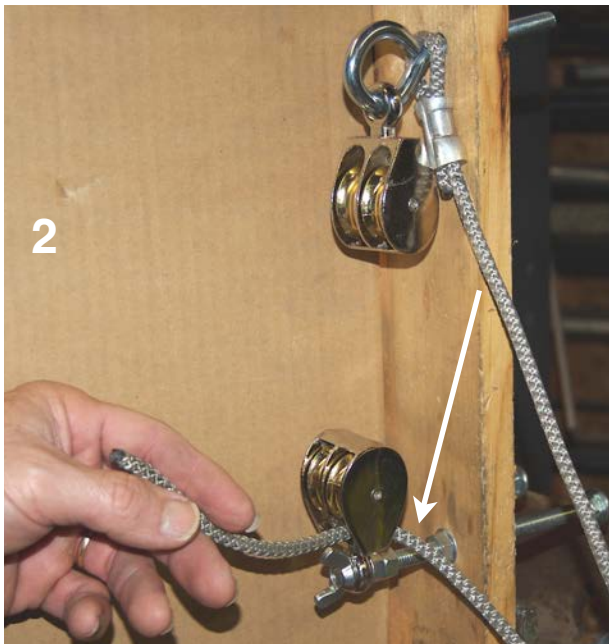
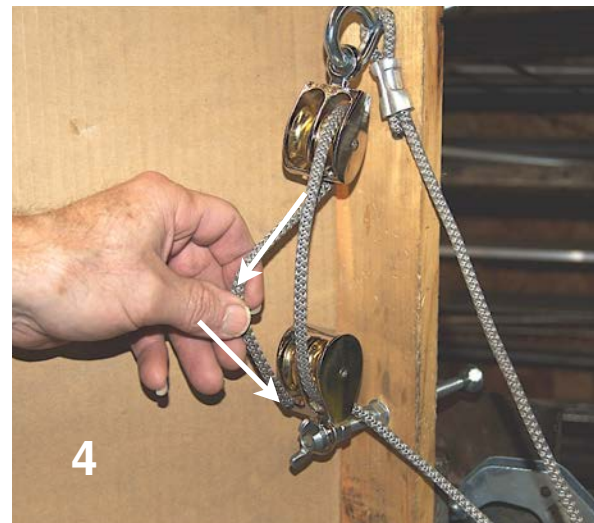


Troyer's Replacement Rope

Start by removing the old rope from your pulleys. You will need to remove the nut and washer that holds the rope to the eye bolt and replace the washers and nuts in the same configuration.

Step 1) You will notice you have an upper pulley that has the eyebolt attached and lower pulley. It would probably be easiest if you could have some one hold the upper and lower pulley while you thread the rope on. Begin by sliding the rope through the crimp where the rope is through the eyebolt. Place your washer and nut back on. Have your helper hold the upper pulley by the eyebolt, making sure the open section of the eyebolt faces up, and hold the lower pulley so that the pulley faces upward (see photos)

Step 2) Follow the photos as to how to thread the rope thru. When you have the rope threaded pull all the rope thru the pulleys and make sure your alignment appears exactly as seen in the last photo.

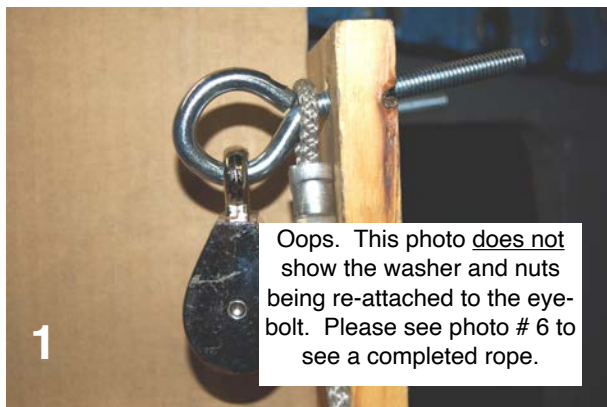

Troyer's Replacement Rope

